


Bedienungsanleitung

58597 Drehzahlmesser mit Stundenzähler
12V/24V

- | | |
|--|---|
| <ol style="list-style-type: none"> 1.) Zündung ausschalten. 2.) Knopf P1 und P2 auf der Rückseite gleichzeitig drücken. 3.) Zündung ein und Fahrzeug starten 4.) P1 und P2 auslassen 5.) Motor auf eine bestimmte Drehzahl bringen 6.) Drücken sie P1 oder P2 und bewegen Sie den Zeiger bis zum bestimmten Drehzahlwert 7.) P1 und P2 für ein paar Sekunden gleichzeitig drücken, bis der Zeiger auf null zurückfällt. 8.) Fahrzeug abstellen und Zündung ausschalten. 9.) Zündung ein, Fahrzeug starten. 10.) Nun ist der Drehzahlmesser Kalibriert. | <ol style="list-style-type: none"> 1.) Turn off the Vehicle 2.) Press P1 and P2 simultaneously (on the rear of the gauge) 3.) Turn on the vehicle 4.) Release P1 and P2 5.) Set engine at a value of RPM specific 6.) Press P1 or P2 and move the pointer at value of RPM specific 7.) Press P1 and P2 simultaneously for a few seconds until the pointer comes back to "0" position 8.) Turn off the vehicle 9.) Turn it on again – now it's calibrated |
|--|---|

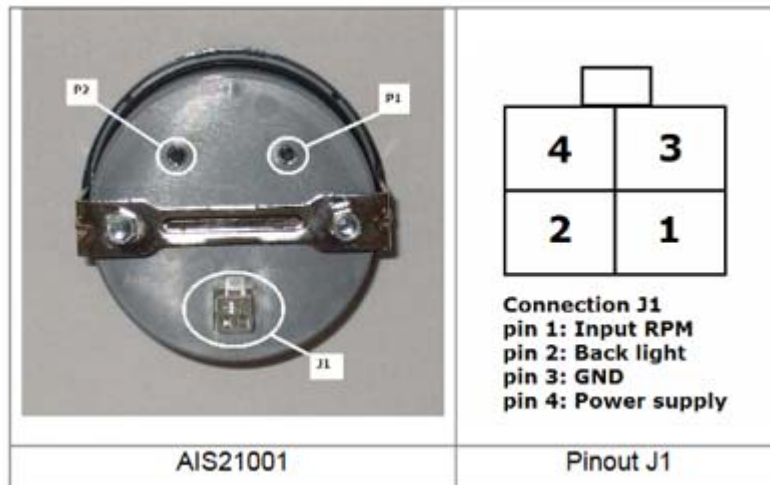

- 1.) Eingang Drehzahl (W)
- 2.) Beleuchtung
- 3.) Batterie (-)
- 4.) Batterie (+)