




Ersatzteilliste zu 67616



**Oberharrern 33
4691 Schlatt
Tel.: +43(0)7673/30703
Fax: +43(0)7673/30703/40
verkauf@oekoprofi.com
www.oekoprofi.com**

 Aufbauanleitung

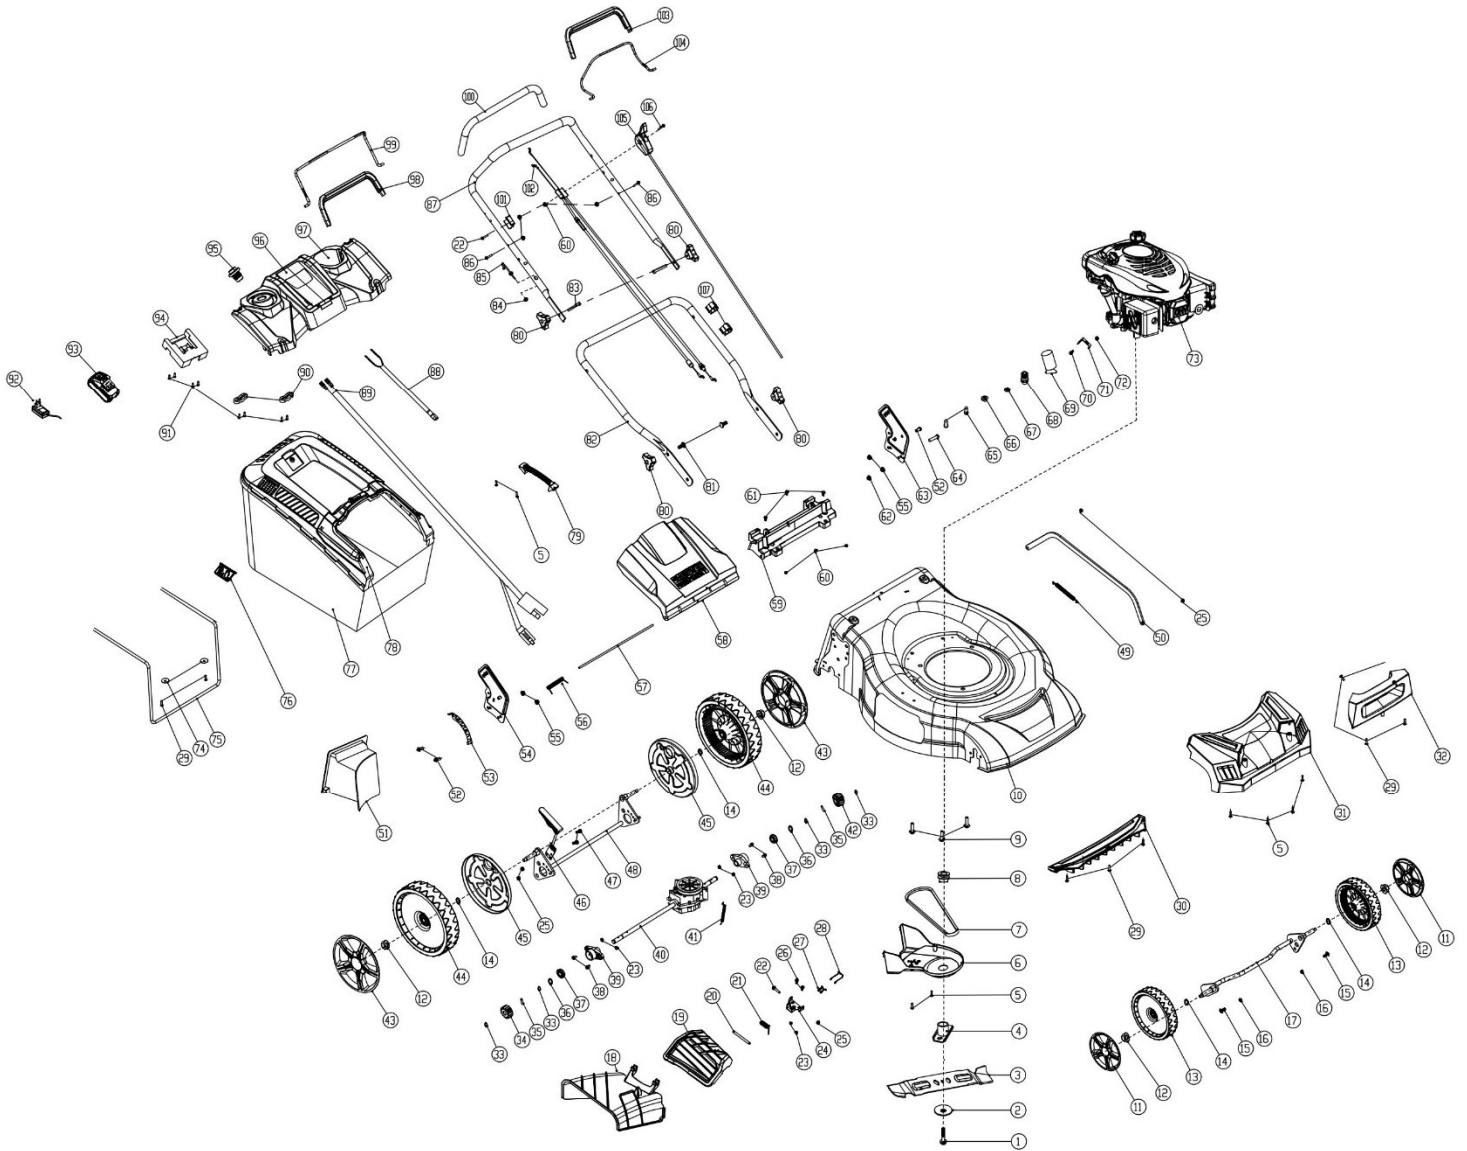


Ersatzteilliste Rasenmäher

Nr.:	Best.Nr.:	Englische Bezeichnung	Deutsche Bezeichnung
1	ZY85533-001	BLADE BOLT	Messer-Schraube
2	ZY85533-002	GASKET	Unterlegscheibe
3	ZY85533-003	BLADE	Messer 21"
4	ZY85533-004	BLADE HOLDER	Messerhalter
5	ZY85533-005	SCREW	Schraube
6	ZY85533-006	BELT COVER	Riemenschutz
7	ZY85533-007	Z TYPE BELT	Riemen
8	ZY85533-008	PULLEY	Riemenscheibe
9	ZY85533-009	BOLT	Schraube
10	ZY85533-010	DECK	Gehäuse
11	ZY85533-011	8"WHEEL CAP	Schutzkappe 8"
12	ZY85533-012	NUT	Mutter
13	ZY85533-013	8"WHEEL	Rad 8"
14	ZY85533-014	GASKET	Unterlegscheibe
15	ZY85533-015	SCREW	Schraube
16	ZY85533-016	NUT	Mutter
17	ZY85533-017	FRONT AXLE	Vorderachse
18	ZY85533-018	SIDE DISCHARGE PLUG	Seitenauswurf-Stopfen
19	ZY85533-019	SIDE DISCHARGE COVER	Seitenauswurf-Abdeckung
20	ZY85533-020	SIDE DISCHARGE SHAFT	Seitenauswurf-Welle
21	ZY85533-021	SIDE DISCHARGE SPRING	Seitenauswurf-Feder
22	ZY85533-022	BOLT	Schraube
23	ZY85533-023	NUT	Mutter
24	ZY85533-024	SIDE DISCHARGE SUPPORTER	Seitenauswurfstütze
25	ZY85533-025	NUT	Mutter
26	ZY85533-026	BOLT	Schraube
27	ZY85533-027	SPRING OF LOCK	Verriegelungsfeder
28	ZY85533-028	WIRE OF LOCK	Verriegelungsdraht
29	ZY85533-029	SCREW	Schraube
30	ZY85533-030	COMB	Rasenkamm
31	ZY85533-031	FRONT FACE	Frontplatte
32	ZY85533-032	FRONT FACE HANDLE	Frontgriff
33	ZY85533-033	RING	Sicherungsring
34	ZY85533-034	GEAR R	Zahnrad P
35	ZY85533-035	PIN	Stehbolzen
36	ZY85533-036	WASHER	Unterlegscheibe
37	ZY85533-037	STAMPING SLEEVE	Gleitbuchse
38	ZY85533-038	SCREW	Schraube
39	ZY85533-039	AXLE CLAMP	Achsschelle
40	ZY85533-040	GEARBOX	Getriebe
41	ZY85533-041	SPRING OF GEARBOX	Dämpfungsfedern
42	ZY85533-042	GEAR L	Zahnrad L
43	ZY85533-043	11"WHEEL CAP	Radkappe 11"
44	ZY85533-044	11"WHEEL	Rad 11"
45	ZY85533-045	DUSTPROOF WHEEL COVER	Staubdichte Radabdeckung
46	ZY85533-046	HEIGHT ADJUSTING HANDLE	Höhenverstellbarer Griff
47	ZY85533-047	BOLT	Schraube
48	ZY85533-048	REAR AXLE	Hinterachse
49	ZY85533-049	SPRING OF HEIGHT ADJUSTMENT	Höhenverstellfeder
50	ZY85533-050	HEIGHT ADJUSTING POLE	Höhenverstellung
51	ZY85533-051	MULCHING PLUG	Mulchstopfen
52	ZY85533-052	BOLT	Schraube
53	ZY85533-053	POSITION PLATE	Positionsplatte
54	ZY85533-054	HANDLE SUPPORTER R	Haltebügel P
55	ZY85533-055	NUT	Mutter
56	ZY85533-056	SPRING	Feder
57	ZY85533-057	REAR COVER SHAFT	Welle für die hintere Abdeckung
58	ZY85533-058	REAR COVER	Hintere Abdeckung
59	ZY85533-059	CLAMP OF GRASS CATCHER	Grasfangkorb-Klemme
60	ZY85533-060	NUT	Mutter
61	ZY85533-061	BOLT	Schraube
62	ZY85533-062	NUT	Mutter
63	ZY85533-063	HANDLE SUPPORTER L	Haltebügel L
64	ZY85533-064	BOLT	Schraube
65	ZY85533-065	CAP	Aufsatz
66	ZY85533-066	CABLE SLEEVE	Kabelhülse
67	ZY85533-067	NUT	Mutter
68	ZY85533-068	WASH CONNECTOR	Steckverbindung
69	ZY85533-069	RELAY	Relais

70	ZY85533-070	BOLT	Schraube
71	ZY85533-071	GEARBOX BASE	Haltegriff
72	ZY85533-072	NUT	Mutter
73	ZY85533-073	ENGINE	Motor
74	ZY85533-074	GASKET	Unterlegscheibe
75	ZY85533-075	GRASS CATCHER	Grasfangkorb
76	ZY85533-076	FULL INDICATOR	Vollindikator
77	ZY85533-077	GRASS CATCHER BAG	Grasfangbeutel
78	ZY85533-078	GRASS CATCHER COVER	Abdeckung für den Grasfangkorb
79	ZY85533-079	GRASS CATCHER HANDLE	Griff des Grasfangkorbs
80	ZY85533-080	KNOB	Drehknopf
81	ZY85533-081	BOLT	Schraube
82	ZY85533-082	DOWN HANDLE	Unterer Griff
83	ZY85533-083	BOLT	Schraube
84	ZY85533-084	NUT	Mutter
85	ZY85533-085	HOOK	Haken
86	ZY85533-086	BOLT	Schraube
87	ZY85533-087	UP HANDLE	Oberer Griff
88	ZY85533-088	BATTERY PACK CABLE	Kabel
89	ZY85533-089	STARTING SWITCH WIRE	Starterkabel
90	ZY85533-090	CABLE RAMP	Gegengewicht
91	ZY85533-091	SCREW	Schraube
92	ZY85533-092	BATTERY CHARGER	Ladegerät
93	ZY85533-093	BATTERY PACK	Batterie
94	ZY85533-094	BATTERY PACK BASE	Batteriepack-Basis
95	ZY85533-095	STARTING SWITCH ASSEMBLY	Startschalter-Baugruppe
96	ZY85533-096	PANEL COVER	Panelabdeckung
97	ZY85533-097	PANEL	Bedienfeld
98	ZY85533-098	LEVER CLIP	Hebelanschluss
99	ZY85533-099	BRAKE LEVER	Bremsehebel
100	ZY85533-100	SOFT GRIP	Ergonomischer Griff
101	ZY85533-101	CABLE SUPPORTING	Kabelhalter
102	ZY85533-102	BRAKE - DRIVE TWIN CABLE	Brems- und Antriebsdoppelkabel
103	ZY85533-103	LEVER CLIP	Hebelhalter
104	ZY85533-104	DRIVE LEVER	Antriebshebel
105	ZY85533-105	THROTTLE	Drosselklappe
106	ZY85533-106	BOLT	Schraube
107	ZY85533-107	CABLE CLAMP	Kabelhalter


Teileliste - LC1P75F-Motor

 Abbildung A - ZYLINDERKOPF

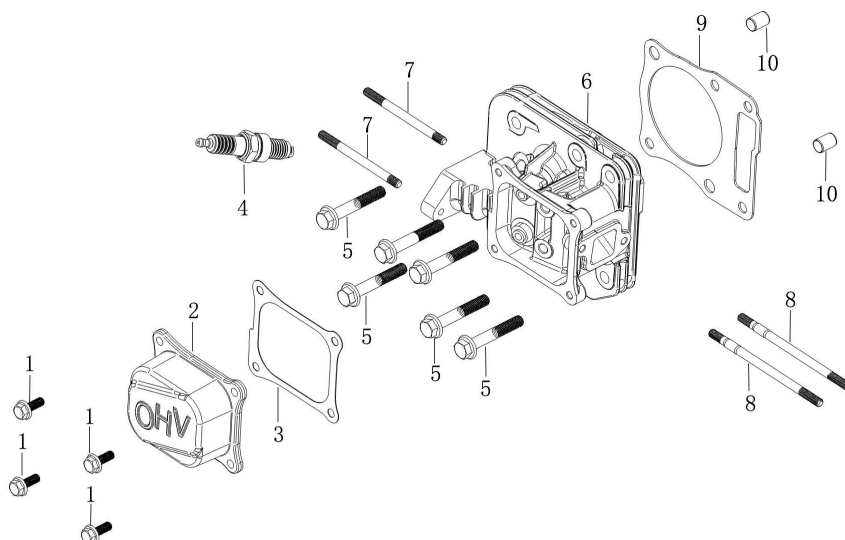

1	ZL_LC1P75F-A01	HEXAGON BOLT WITH FLANGE	Sechskantschraube mit Flansch	380140013-0005	C
2	ZL_LC1P75F-A02	CYLINDER HEAD COVER	Zylinderkopfdeckel	120230152-0001	CX
3	ZL_LC1P75F-A03	GASKET FOR CYLINDER HEAD COVER	Zylinderkopfdeckeldichtung	120250059-0001	AX
4	ZL_LC1P75F-A04	SPARK PLUG	Zündkerze	270960014-0001	AX
5	ZL_LC1P75F-A05	HEXAGON BOLT WITH FLANGE	Sechskantschraube mit Flansch	380140339-0001	C
6	ZL_LC1P75F-A06	CYLINDER HEAD	Zylinderkopf	120080609-0002	BX
7	ZL_LC1P75F-A07	STUD	Bolzen	380180114-0001	C
8	ZL_LC1P75F-A08	STUD	Bolzen	380180093-0001	AX
9	ZL_LC1P75F-A09	GASKET FOR CYLINDER HEAD	Zylinderkopfdichtung	120150211-0002	AX
10	ZL_LC1P75F-A10	LOCATION PIN	Stift	380600117-0001	C

 
Abbildung B - KURBELGEHÄUSE

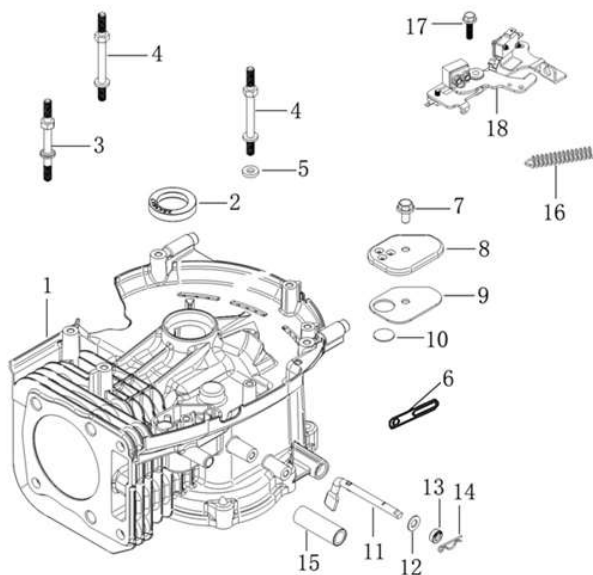

1	ZL_LC1P75F-B01	CRANKCASE BODY	Kurbelgehäuse	110810261-0002	BX
2	ZL_LC1P75F-B02	OIL SEAL	Wellendichtring	380650335-0001	BX
3	ZL_LC1P75F-B03	STAY STUD	Stützstift	380850002-0001	C
4	ZL_LC1P75F-B04	STAY STUD	Stützstift	380850006-0001	C
5	ZL_LC1P75F-B05	BUSHING	Büchse	380821590-0001	C
6	ZL_LC1P75F-B06	CABLE CLEAT	Seilzugklemme	380940346-0003	AX
7	ZL_LC1P75F-B07	HEXAGON BOLT WITH FLANGE	Schraube	380140067-0003	C
8	ZL_LC1P75F-B08	CAP, BREATHER CHAMBER	Entlüftungskammerabdeckung	110840031-0001	CX
9	ZL_LC1P75F-B09	PACKING, BREATHER CHAMBER	Entlüftungskammerdichtung	110850021-0001	AX
10	ZL_LC1P75F-B10	BREATH FIN	Entlüftungsstutzen	110860005-0001	AX
11	ZL_LC1P75F-B11	SPEED REGULATING ARM	Verstellarm	171630023-0001	BX


12	ZL_LC1P75F-B12	FLAT WASHER	Unterlegscheibe	380450527-0001	C
13	ZL_LC1P75F-B13	OIL SEAL	Wellendichtring	380650338-0001	BX
14	ZL_LC1P75F-B14	PIN CLIP	Splint	381350004-0001	AX
15	ZL_LC1P75F-B15	BREATHER TUBE	Rohr	380741158-0002	AX
16	ZL_LC1P75F-B16	TENSION SPRING	Druckfeder	381140580-0001	AX
17	ZL_LC1P75F-B17	HEXAGON BOLT WITH FLANGE	Sechskantschraube mit Flansch	380140086-0002	C
18	ZL_LC1P75F-B18	ENGINE BRAKE	Motorbremse	293030017-0001	BX

 Abbildung C - KURBELGEHÄUSEDECKEL

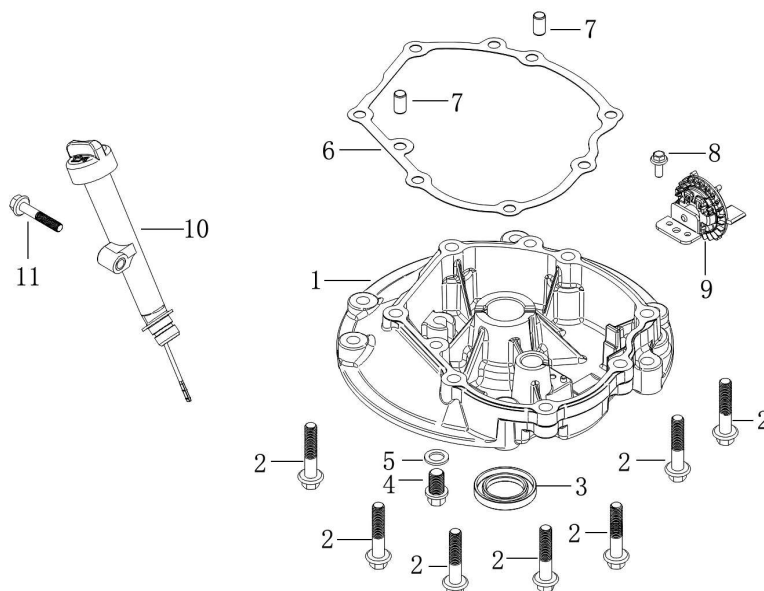


1	ZL_LC1P75F-C01	CRANKCASE COVER	Kurbelgehäusedeckel	110820350-0001	CX
2	ZL_LC1P75F-C02	HEXAGON BOLT WITH FLANGE	Sechskantschraube mit Flansch	380140005-0006	AX
3	ZL_LC1P75F-C03	OIL SEAL	Wellendichtring	380650347-0001	CX
4	ZL_LC1P75F-C04	SEALING PLUG SCREW	Dichtungsschraube	110260025-0001	CX
5	ZL_LC1P75F-C05	FLAT WASHER	Unterlegscheibe	380450514-0001	CX
6	ZL_LC1P75F-C06	CRANKCASE COVER GASKET	Kurbelgehäusedeckeldichtung	110830062-0001	CX
7	ZL_LC1P75F-C07	LOCATION PIN	Stift	380600120-0001	AX
8	ZL_LC1P75F-C08	HEXAGON BOLT WITH FLANGE	Sechskantschraube mit Flansch	380140167-0002	C
9	ZL_LC1P75F-C09	COMPONENTS OF GOVERNOR GEAR	Drehzahlregler	171750031-0001	BX
10	ZL_LC1P75F-C10	OIL RULE COMBINATION	Ölmesstab	110690105-0002	BX
11	ZL_LC1P75F-C11	HEXAGON BOLT WITH FLANGE	Sechskantschraube mit Flansch	380140100-0003	C

 Abbildung D - NOCKENWELLE

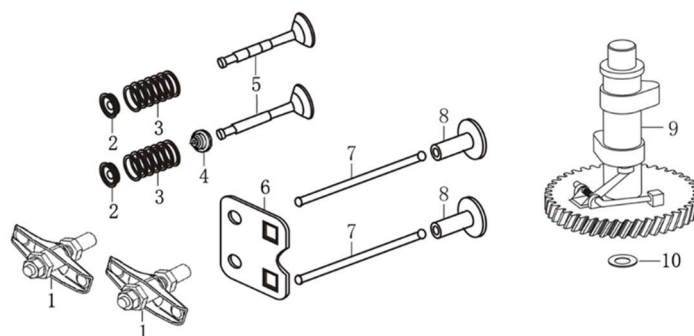


1	ZL_LC1P75F-D01	VALVE ROCKER COMBINATION	Ventilhebel-Set	140450022-0001	BX
2	ZL_LC1P75F-D02	RETAINER, VALVE SPRING	Ventilfederscheibe	140380020-0001	BX
3	ZL_LC1P75F-D03	INNER SPRING OF VALVE	Innere Ventildfeder	140340039-0001	BX
4	ZL_LC1P75F-D04	VALVE OIL SEAL	Ventil-Öldichtung	140400016-0001	BX
5	ZL_LC1P75F-D05	VALVE KIT	Ventilset	500550076-0001	BX
6	ZL_LC1P75F-D06	PLATE, PUSH ROD GUIDE	Ventilplatte	140710015-0001	BX
7	ZL_LC1P75F-D07	PUSH ROD	Stößelstangenhebel	140670032-0001	BX
8	ZL_LC1P75F-D08	LIFTER, VALVE	Ventilstößel	140690002-0001	BX
9	ZL_LC1P75F-D09	CAMSHAFT ASSY	Nockenwellenbaugruppe	140020189-0001	BX
10	ZL_LC1P75F-D10	FLAT WASHER	Unterlegscheibe	380450534-0001	C

 Abbildung E - KURBELWELLENKOLBEN

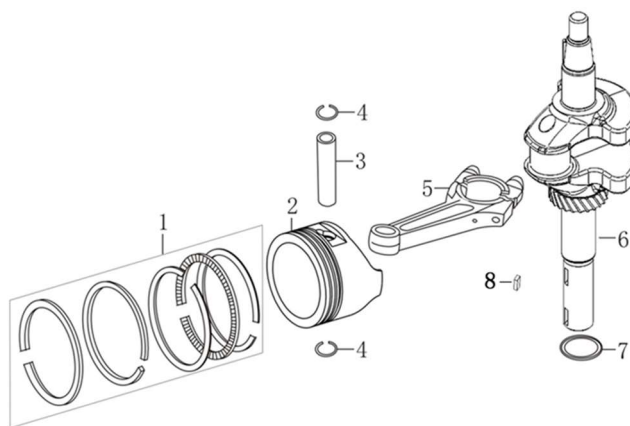


1	ZL_LC1P75F-E01	PISTON RING COMBINATION	Kolbenringe	130070158-0001	AX
2	ZL_LC1P75F-E02	PISTON	Kolben	130030245-0001	AX
3	ZL_LC1P75F-E03	PISTON PIN	Kolbenstift	130060031-0001	BX
4	ZL_LC1P75F-E04	STEEL CABLE BAFFLE RING	Sicherungsring	380560056-0001	BX
5	ZL_LC1P75F-E05	CONNECTING ROD	Pleuelstange	130150149-0001	BX
6	ZL_LC1P75F-E06	CRANKSHAFT	Kurbelwelle	130290526-0001	BX
7	ZL_LC1P75F-E07	FLAT WASHER	Dichtungsscheibe	380450518-0001	C
8	ZL_LC1P75F-E08	KEY	Keil	380620057-0001	BX

 Abbildung F - STARTER

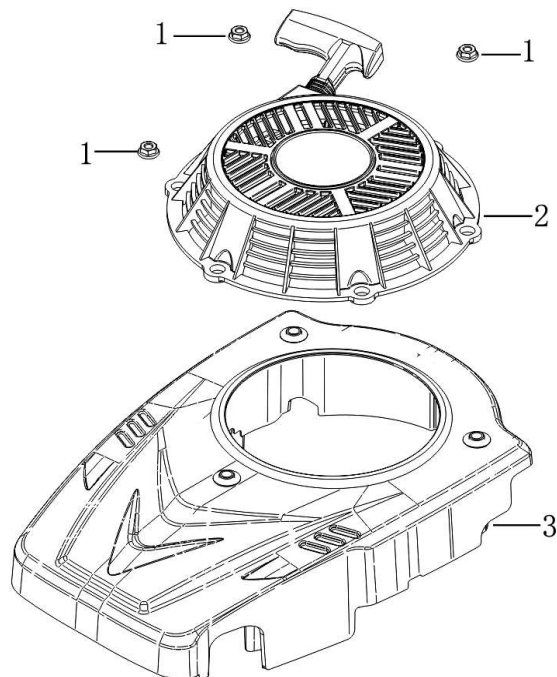


1	ZL_LC1P75F-F01	HEXAGON NUT WITH FLANGE	Sechskantmutter mit Flansch	380370066-0001	C
2	ZL_LC1P75F-F02	MANUAL STARTING COMPONENTS	Starterkit	193500113-0006	BX
3	ZL_LC1P75F-F03	FAN COVER COMP.	Lüfterabdeckung	160210120-0001	BX

 Abbildung G - VERGASER

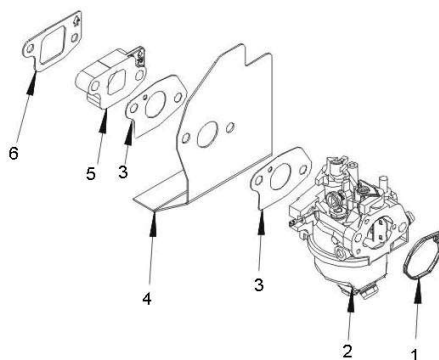


1	ZL_LC1P75F-G01	CARBURETOR GASKET	Vordere Vergaserdichtung	170430177-0001	AX
2	ZL_LC1P75F-G02	CARBURETOR	Vergaser	170022521-0001	BX
3	ZL_LC1P75F-G03	CARBURETOR GASKET	Hintere Vergaserdichtung	170430147-0001	AX
4	ZL_LC1P75F-G04	HEAT INSULATING PLATE FOR CARBURETOR	Isolierplatte	170450007-0001	BX
5	ZL_LC1P75F-G05	HEAT INSULATING PAD FOR CARBURETOR	Isolierunterlegscheibe	170440090-0001	BX
6	ZL_LC1P75F-G06	CARBURETOR GASKET	Vergaserdichtung	170430174-0001	BX

 
Abbildung H - SCHWUNGRAD / ZÜNDUNGSEINHEIT

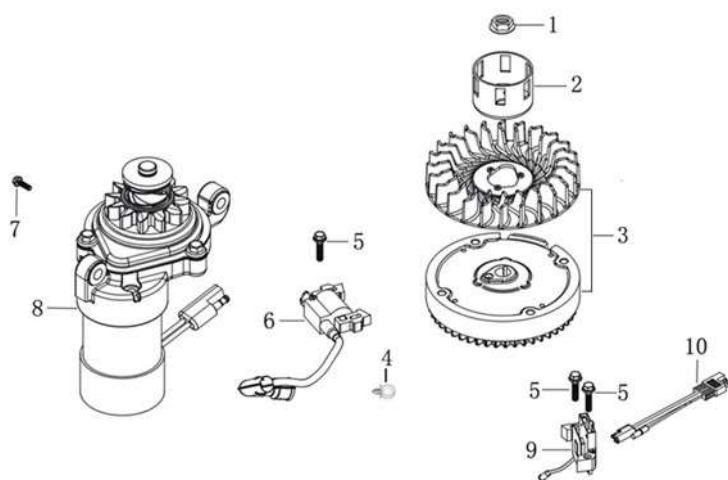

1	ZL_LC1P75F-H01	HEXAGON NUT WITH FLANGE	Sechskantmutter mit Flansch	380370051-0001	C
2	ZL_LC1P75F-H02	STARTING DISC	Anlaufscheibe	193590005-0001	CX
3	ZL_LC1P75F-H03	FLYWHEEL COMP	Schwungrad komplett	270020254-0001	BX
4	ZL_LC1P75F-H04	LOCATION WIRE NAIL	Lage-Nagel	380930025-0001	AX
5	ZL_LC1P75F-H05	HEXAGON BOLT WITH FLANGE	Sechskantbolzen mit Flansch	380140024-0006	C
6	ZL_LC1P75F-H06	COIL ASSY.,IGNITION	Zündspule	270920392-0001	AX
7	ZL_LC1P75F-H07	HEXAGON BOLT WITH FLANGE	Sechskantschraube mit Flansch	380140086-0002	C
8	ZL_LC1P75F-H08	COMPONENTS OF STARTING MOTOR	Anlasser	270360196-0001	BX
9	ZL_LC1P75F-H09	COMPONENTS OF CHAR. CURRENT ARMATURE	Ladespule	270190027-0001	AX
10	ZL_LC1P75F-H10	WIRE BUNDLE OF STARTING MOTOR	Kabelbaum des Motorstarters	270370031-0001	AX

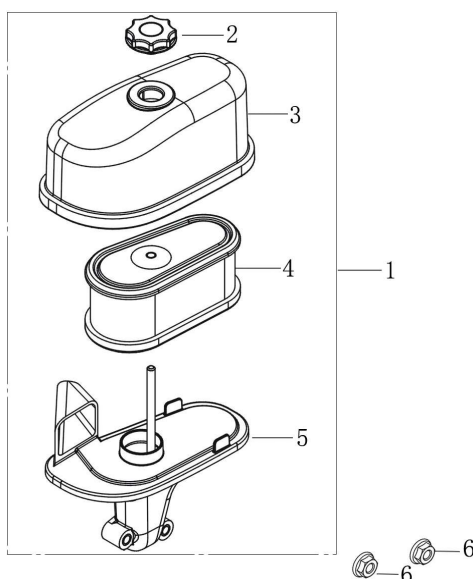 
Abbildung I - LUFTFILTER


1	ZL_LC1P75F-I01	AIR FILTER	Luftfilter komplett	180020744-0001	BX
2	ZL_LC1P75F-I02	HEXAGON NUT WITH FLANGE	Sechskantmutter mit Flansch	181950006-0001	B
3	ZL_LC1P75F-I03	AIR FILTER CASING COVER	Filterabdeckung	180070228-0001	B
4	ZL_LC1P75F-I04	AIR FILTER ELEMENT COMBINATION	Kombination von Luftfilterelementen	180100096-0001	AX
5	ZL_LC1P75F-I05	AIR FILTER SEAT	Luftfilter-Sitz	180280092-0001	B
6	ZL_LC1P75F-I06	HEXAGON NUT WITH FLANGE	Sechskantmutter mit Flansch	380370066-0001	C

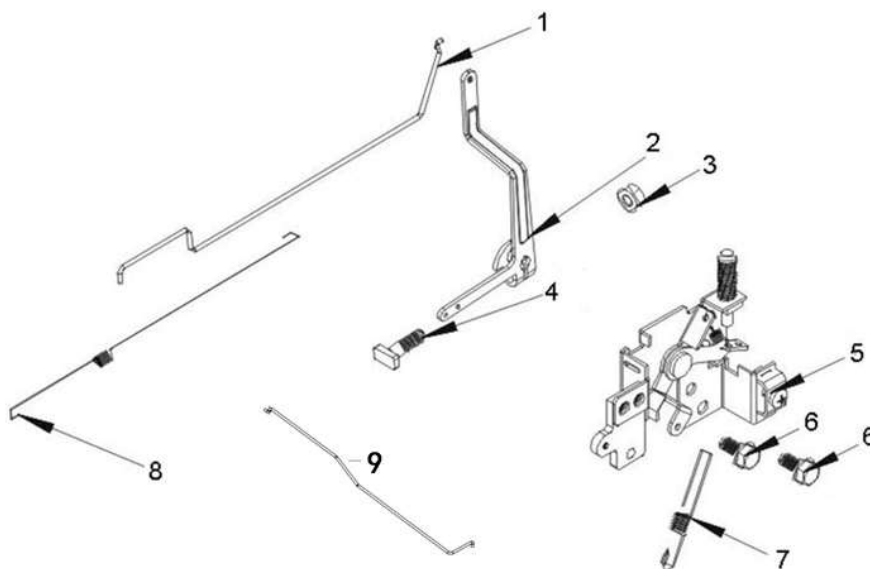 Abbildung J - STEUERUNGSSYSTEM

 
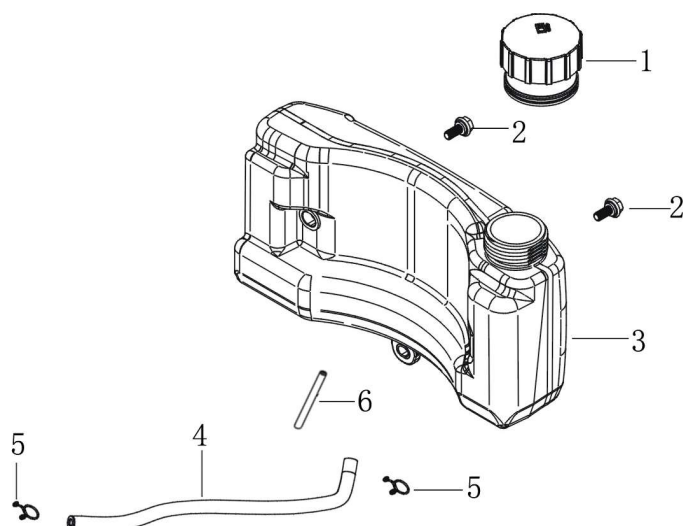 
1	ZL_LC1P75F-J01	THROTTLE ROD	Drosselklappenstange	171590038-0001	BX
2	ZL_LC1P75F-J02	SPEED REGULATING BRACKET	Drehzahlregler	171620015-0003	C
3	ZL_LC1P75F-J03	HEXAGON NUT WITH FLANGE	Sechskantmutter mit Flansch	380370066-0001	C
4	ZL_LC1P75F-J04	SQUARE HEAD SET SCREW WITH FLAT POINT	quadr. Setzschraube mit flacher Spitze	380250002-0001	C
5	ZL_LC1P75F-J05	THROTTLE HANDLE COMBINATION	Gasgriffkombination	171680037-0001	BX
6	ZL_LC1P75F-J06	HEXAGON BOLT WITH FLANGE	Sechskantschraube mit Flansch	380140067-0003	C
7	ZL_LC1P75F-J07	GOVERNING SPRING	Regulierfeder	171600105-0001	AX
8	ZL_LC1P75F-J08	THROTTLE RETURN SPRING	Drosselklappenrückstellfeder	171610031-0001	AX
9	ZL_LC1P75F-J09	CHOKE VALVE PULL ROD	Zugstange des Saugventils	171650032-0001	BX

Abbildung K - AUSPUFF

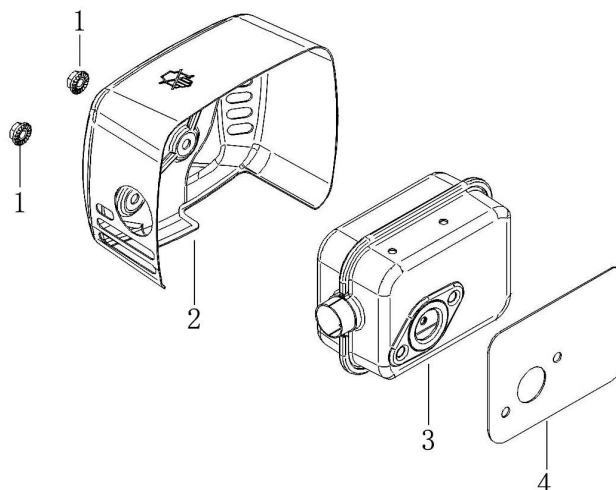

1	ZL_LC1P75F-K01	HEXAGON NUT WITH FLANGE	Sechskantmutter mit Flansch	380370048-0001	C
2	ZL_LC1P75F-K02	MUFFLER GUARD SHIELD	Auspuffschutz	180960143-0001	C
3	ZL_LC1P75F-K03	MUFFLER	Schalldämpfer	180571972-0001	BX
4	ZL_LC1P75F-K04	MUFFLER GASKET	Auspuffdichtung	180660081-0001	AX

Abbildung L - KRAFTSTOFFTANK



1	ZL_LC1P75F-L01	TANK COVER	Tankdeckel	170870094-0001	BX
2	ZL_LC1P75F-L02	HEXAGON SHAFT SHOULDER BOLT	Sechskantschulterbolzen	380020071-0001	C
3	ZL_LC1P75F-L03	TANK	Behälter	170490217-0001	BX
4	ZL_LC1P75F-L04	OIL TUBE	Kraftstoffschlauch	380750234-0002	AX
5	ZL_LC1P75F-L05	PIPE CLIP	Rohrschelle	380950190-0001	AX
6	ZL_LC1P75F-L06	FUEL FILTER	Kraftstofffilter	170010017-0001	AX